




Y16 FLASHLIGHT SPECIFICATION



WARNING:

1. Do not shine directly in the eyes, the powerful LED light will damage the eyes immediately.
2. If the battery is not used for a long time, please charge and discharge it every 3 months to keep the battery in good condition.
3. It is normal to use the lights for a long time to heat up.
4. When the indicator light shows low power, please charge the battery as soon as possible.
5. Please keep the battery away from water, moisture and drop etc.
6. To avoid damage to the surface of the flashlight, please do not expose the flashlight to sunlight, water, chemicals, corrosive gases or any other oxidizing environment frequently.
7. Before use, please tear off the transparent film on the battery surface before use.

INSTRUCTIONS FOR USE

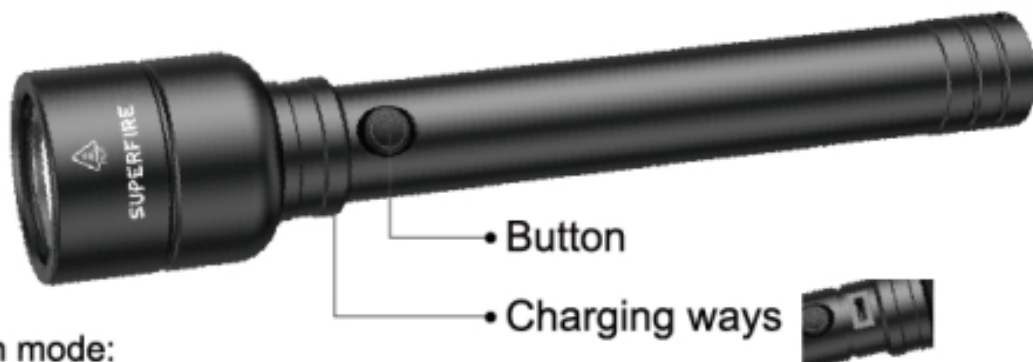

1. Switch mode:

Regular mode: press the button slightly to change the mode (Low Light-Medium Light-Strong Light-Strobe-SOS-Off).

Super light mode: double click in the shutdown state to open the super light, then continue to button to the regular mode. Press and hold any mode for 1 second to shut down.

2. Indicator light display:

The red indicator light flashes when charging. The blue indicator light is always on when it is fully charged. The blue indicator light is always on when starting

PRODUCT PARAMATERS

Model	Y16	Power	20W
Charging ways	Type-C	Weight	263G
Battery	21700	Size	27*48*241mm
Mode	Low Light-Medium Light-Strong Light-Strobe-SOS-Off		

APPLICATION SCENARIO



Camping



Mountaineering



Capture



GO fishing



Rock climbing



Cycling



Motion



Construction



Explore



Repair

Warranty card

User name: _____

Phone number: _____

E-mail: _____

Address: _____

Other Contacts: _____

Release Date: _____